TERMINIX® ALLCLEAR®

MOSQUITO SOLUTIONS

2000 EDITION

OPERATOR'S MANUAL

1-888-9NO-BITE

www.terminixallclear.com

Covered by one or more of U.S. Patent 6,951,073 and patents pending

READ AND SAVE THESE INSTRUCTIONS

QUESTIONS OR COMMENTS

Please contact Universal Pest Solutions if you have any questions about your TERMINIX® ALLCLEAR® Cordless Mosquito Mister at:

1-888-9NO-BITE or **www.terminixallclear.com**

Universal Pest Solutions, LP
5950 Berkshire Lane, Suite 400
Dallas, TX 75225

INTRODUCTION

Congratulations on your purchase of the TERMINIX® ALLCLEAR® Mosquito Mister, the only portable mosquito control device that when used with ALLCLEAR Mosquito Mister Concentrates delivers immediate and reliable control of mosquitoes and other small biting insects* in your yard. The TERMINIX ALLCLEAR Mosquito Mister's patented misting technology delivers a 3-minute, ultra-fine mist that creates a barrier of biting insect protection of up to 2,000 sq. ft. for as long as 6 hours.**

Together, the TERMINIX ALLCLEAR Mosquito Mister and ALLCLEAR Concentrates quickly kill and repel mosquitoes and other biting insects, giving you and your family the freedom and confidence to enjoy hours of outdoor activities without the annoyance of biting insects.

Incorporate the TERMINIX ALLCLEAR products into your complete mosquito management program. Enjoy and use responsibly.

TABLE OF CONTENTS

Safety Information and Instructions 4
Product Registration.....4
Repair and Service 4
Mister Description.....5
Mister Set-Up 6
- Charging & Recharging the Battery.....6
- Filling the Tank.....7

Operation.....8
- Positioning the Mister 8
- Activating Mist Cycle.....9 & 10

Storage and Winterization 10
Troubleshooting.....11
Frequently Asked Questions.....12
Warranty.....13

* Other insects include: ticks, gnats, horse flies, stable flies, deer flies, face flies and others.

** When used with ALLCLEAR PLUS Concentrate. Results may vary based on environmental factors such as rain, wind, sunlight, temperature, and humidity.

Safety Information & Instructions

PLEASE READ ENTIRE OPERATOR'S MANUAL AND ALLCLEAR CONCENTRATE LABEL BEFORE PLACING AND OPERATING YOUR TERMINIX ALLCLEAR MOSQUITO MISTER.

GENERAL

- TERMINIX ALLCLEAR Mosquito Mister is designed for use ONLY with ALLCLEAR Mosquito Mister Concentrates. (*Not Included. Sold Separately.*)
- **Important:** read and follow ALLCLEAR Mosquito Mister Concentrate label completely before use.
- For outdoor use only.

OPERATIONAL

- Operate Mister when needed and when mosquitoes are most active – typically dawn and dusk.
- For optimal results, avoid using the Mister during high winds (>10 mph), heavy rainfall, fog, or when outside air temperatures fall below 50 degrees Fahrenheit.
- Charge battery indoors, in a dry location, and away from outdoor elements.
- Be a good neighbor — some individuals may have sensitivities to pesticides or object to them drifting onto their property.

Product Registration

Go online and register your TERMINIX ALLCLEAR Mosquito Mister today!

Why Register?

- Activate Mister warranty
- Provide valuable product feedback
- Choose to review special offers and tips
- Chance to win free product!

To register go to www.terminixallclear.com.

Repair & Service

Universal Pest Solutions is committed to excellent quality and service. If you have any questions about your TERMINIX ALLCLEAR Mosquito Mister or require replacement parts, please contact us at:

1-888-9NO-BITE or 1-888-966-2483 or visit our Web site at: www.terminxallclear.com

Please have serial number ready when calling customer service. Serial number is located on the bottom of the battery pack.

Record Serial Number here: _____

Mister Description

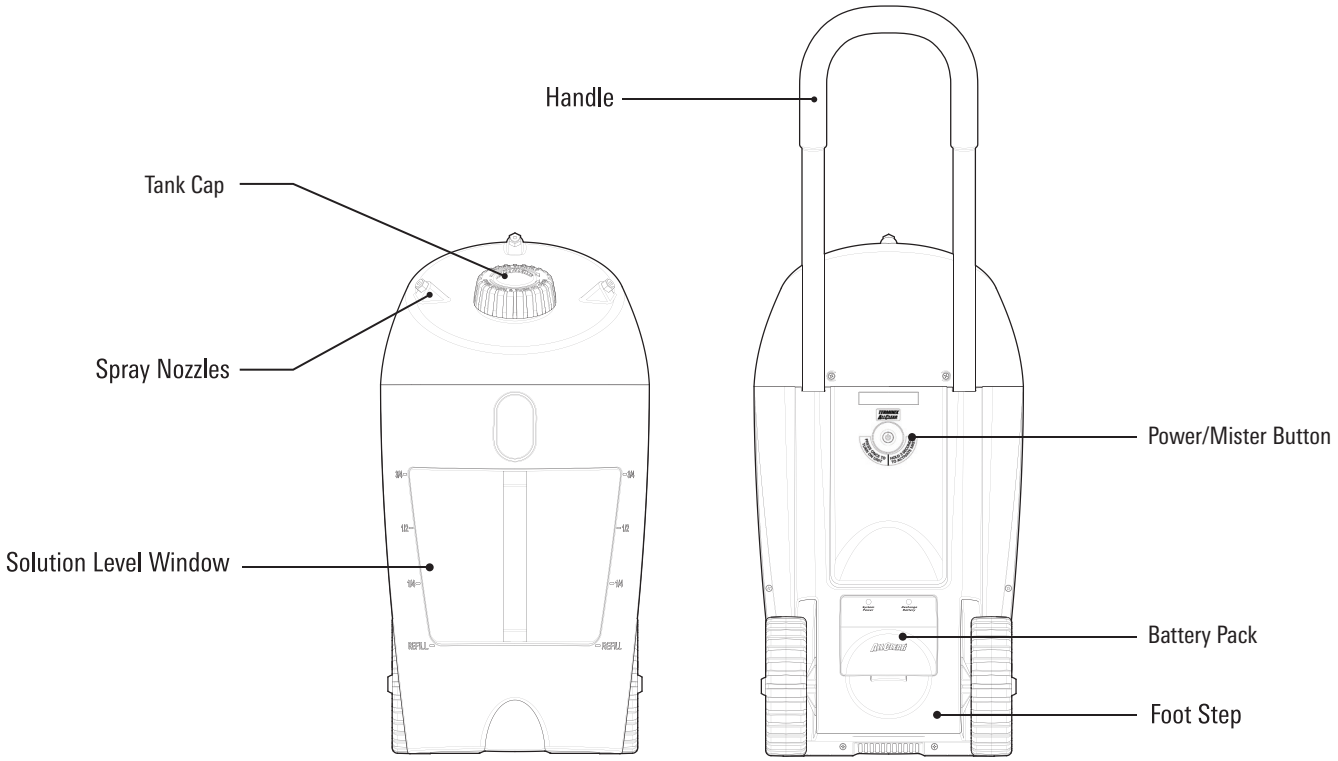

PARTS INCLUDED

Cordless Mosquito Mister



Battery Charging Adapter

Remote Control

(included: CR2032 or equivalent; 3V 20MM lithium coin battery)

Operator's Manual

YOU'LL NEED:
Sold Separately

Mister designed for use ONLY with ALLCLEAR Concentrates. For more information about concentrates or where to purchase, visit: **www.terminixallclear.com**

Naturals™ Concentrate

OR

Synergized PLUS Concentrate

Mister Set-Up

IMPORTANT TIPS

- Before first use and at the start of each season, charge Battery Pack for 4 hours. Allow approximately 2 to 4 hours for later battery charges.
- Recharge battery when Recharge Battery light on Battery Pack is lit.
- Fully charged, Mister battery will operate for approximately 15 mist applications before needing to be recharged.
- User can charge Mister Battery Pack for 10 minutes to get one mist application before recharging fully.
- Battery may be recharged at any time without harming the battery.
- Charge battery fully before storing for the winter.

CHARGING & RECHARGING THE BATTERY

Charge the Battery Pack for 4 hours or until light on Charging Adapter is Green. Fully charged, battery will operate for approximately 15 mist applications before needing to be recharged. To charge Mister battery:

1. Locate Battery Pack at rear base of Mister.
2. Place hand under Battery Pack, squeeze latch, and pull Pack outward to remove.
3. Insert Battery Charging Adapter cord into Battery Pack Charge Port.
4. Charge Battery Pack for 4 hours or until light on Charging Adapter is Green.
5. Unplug Adapter from Battery Pack and reinsert Pack into base of Mister. Battery Pack is fully inserted if power light illuminates when green Power/Mist button is pressed.

NOTE: *When light on Charging Adapter is Green, battery is fully charged and Mister is ready for use. If light on Adapter is Red, charge battery for at least 4 hours or until the light is Green. If Recharge Battery light is on, charge battery as directed above.*

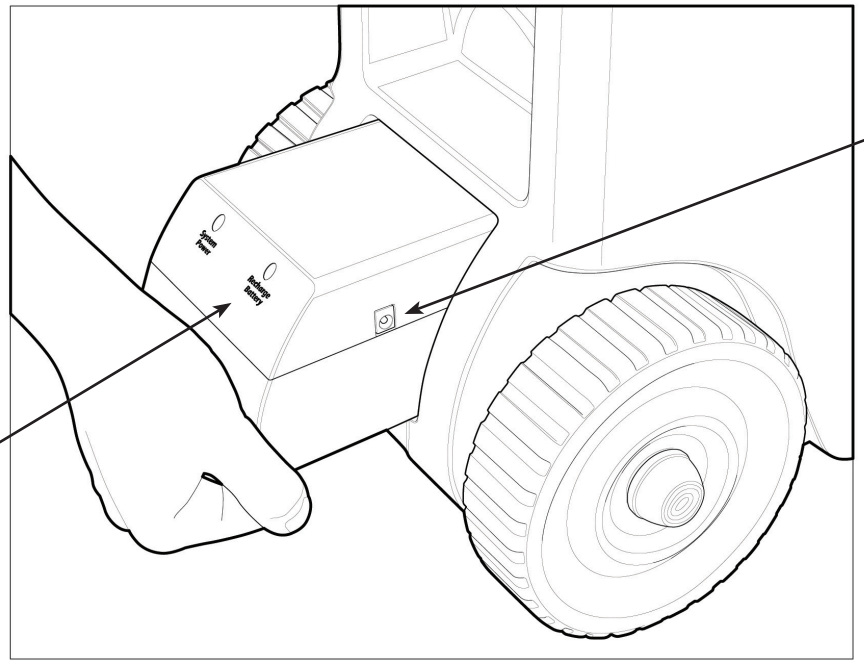

Mister Set-Up

FILLING THE TANK*

1. Remove Tank Cap from the top of the unit by pushing down and turning Cap counterclockwise.

   NOTE: *Beneath Tank Cap is a Filter. Leave in place when filling Tank. As needed, remove filter and rinse clean with water. After rinsing, replace filter in tank opening.*

2. Slowly fill Tank with water to the '1/2' full indicator (see Mister front panel). For best results use a garden hose or watering can.
3. Slowly add one entire bottle of ALLCLEAR Concentrate. (Before adding Concentrate, read Concentrate instructions carefully.)
4. Slowly finish filling Tank with water until solution level reaches bottom of filter. Be sure to fill Tank slowly to avoid foaming of solution.
5. Replace Tank Cap.

***NOTE:** *When filling for the first time, users may want to test with water only. Be sure to fill Mister all the way.*

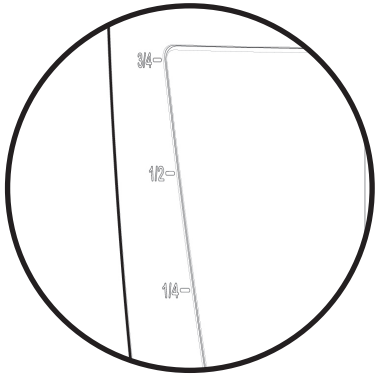

IMPORTANT TIPS

- The TERMINIX ALLCLEAR Mosquito Mister is designed for use ONLY with ALLCLEAR Mosquito Mister Concentrates. Not Included. *Sold Separately.*
- Refill Mister only when Tank is completely empty and/or when solution level is below Refill indicator on front of tank. This prevents incorrect solution mix which could affect operation.

TRANSPORTING MISTER IN A VEHICLE

The Mister can be transported in a car or other vehicle. When possible, empty Tank. To transport:

1. Securely fasten Tank Cap.
2. Position Mister upright in vehicle to prevent leaking of solution from Tank Cap if tank is not empty.
3. Secure Mister to prevent movement when vehicle is in motion.

Operation

POSITIONING THE MISTER

Proper placement of the Mister is important for optimal insect control. In certain situations, users may need to mist more than once and/or move the Mister to another location to achieve optimal results (see Important Tips).

1. Determine area to be protected.
2. Pull up on Mister Handle and roll into desired coverage area.
3. Establish direction of prevailing wind and position Mister according to wind conditions (see illustrations).

EXAMPLE:

Treating a patio area. Determine prevailing wind. Depending on wind direction, place Mister on either side of, in the center of, or a few feet beyond center of patio so that prevailing winds will carry mist solution directly over patio and surrounding areas.

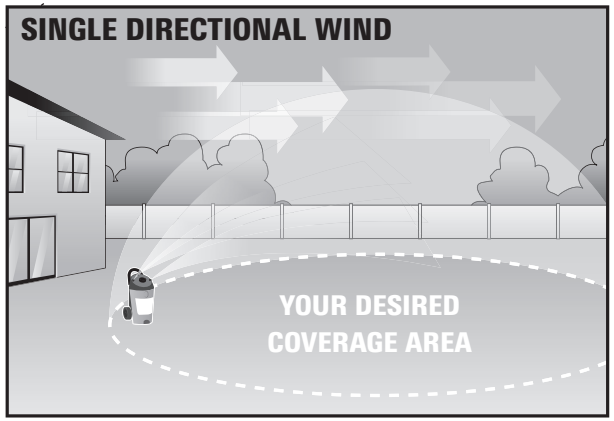

Position Mister at edge of desired coverage area with Mister nozzles facing mist area so that prevailing wind will carry mist solution over target area.

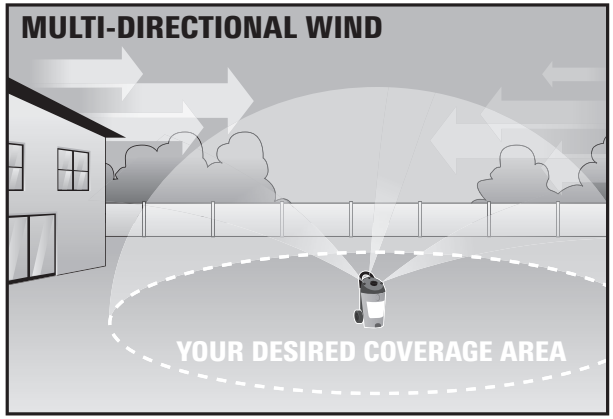

Position Mister in the center of desired coverage area so that the wind will carry mist solution equally throughout desired coverage area.

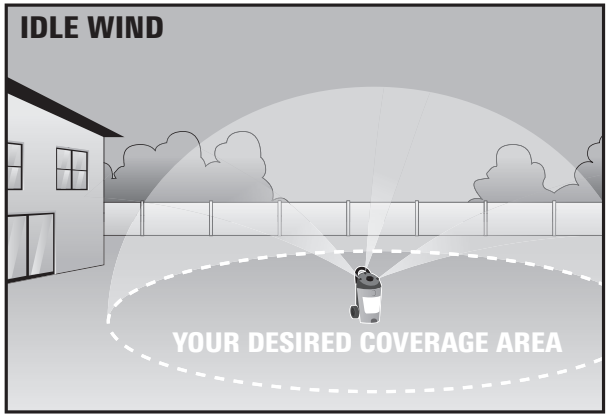

Position Mister in the center of desired coverage area or a few feet beyond center of coverage area.

IMPORTANT TIPS

- Mister performs best if positioned and activated inside of or near desired coverage area.
- For optimal control, users may need to mist an area more than once and/or move the Mister to another part of the treatment area in the following situations:
  - Areas of very heavy mosquito populations
  - Areas planned for large gatherings (more people bring increased mosquito activity)
  - Areas where wind is idle since solution may not be carried as far into treatment area
- Operate Mister daily for optimal results.

Operation

IMPORTANT TIPS

- Operate Mister daily for optimal results.
- Mister will automatically power OFF after 10 minutes of inactivity
- Users will experience immediate relief from biting insects. Best results are realized 10-15 minutes after misting.
- In areas of high mosquito populations or in situations where many people are inside coverage area, additional mist applications may be necessary.
- Avoid using Mister during high winds (>10 mph), heavy rainfall, fog, or when outside air temperatures fall below 50 degrees Fahrenheit or other times when insects are typically not active.

ACTIVATING MIST CYCLE

WHEN TO ACTIVATE:

The TERMINIX ALLCLEAR Mosquito Mister can be used any time of day to provide immediate and reliable control of mosquitoes, gnats, ticks, and other biting insects for up to 6 hours in an area of up to 2,000 sq. ft.* It is recommended that users activate Mist Cycle 10 to 15 minutes before spending time outdoors to allow for mist solution to take maximum effect (especially when mosquitoes are most active). See ALLCLEAR Concentrate label and/or go to www.terminixallclear.com for additional application instructions.

WHAT TO EXPECT:

The TERMINIX ALLCLEAR Mosquito Mister mists an ultra-fine solution of water and ALLCLEAR Mosquito Mister Concentrate. The mist solution is atomized out from Mister and carried by the wind into desired coverage area. During the 3-minute Mist Cycle, the mist appears like a light fog and is visible for the first 5-10 feet from the machine. Even when no longer visible, mist continues to move throughout the coverage area creating an invisible barrier of protection from biting insects for hours. Users will experience immediate relief from biting insects. Best results are realized 10-15 minutes after misting. In areas of high mosquito populations or when there is a large gathering, such as a party, additional mist applications may be necessary.

Depending on weather and wind conditions, mist may swirl high and low around Mister and/or it may move directly out from unit or drift behind Mister during Mist Cycle. This is normal operation. If mist moves toward an undesired area, stop Mist Cycle with Remote Control, allow mist to dissipate, and reposition Mister so mist is carried by wind into desired area. (See page 8 for 'Positioning the Mister' instructions.)

ACTIVATING WITH REMOTE CONTROL

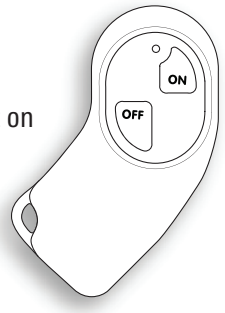

1. Press green Power/Mist Button on back of Mister once to turn unit ON. System Power light on Battery Pack will flash indicating unit is ON.

   NOTE: *Mister will automatically power OFF after 10 minutes of inactivity.*
2. Press and HOLD for one second Remote Control ON button.
3. Mister begins a 12 second audible countdown before 3-minute Mist Cycle begins.
4. Watch mist movement to ensure mist moves toward desired area.

   NOTE: *If mist moves toward an undesired area, stop Mist Cycle by pressing OFF button once on Remote Control device.*
5. Mist Cycle automatically ends after 3 minutes.
6. If needed, move or reposition Mister (see page 8).

   CAUTION: *Store Remote Control device in an area inaccessible to children.*

* When used with ALLCLEAR PLUS Concentrate. Other insects include: ticks, gnats, horse flies, stable flies, deer flies, face flies and others.

Operation

ACTIVATING DIRECTLY FROM MISTER

1. Press green Power/Mist Button on back of Mister once to turn unit ON. System Power light on Battery Pack will flash indicating unit is ON.

   NOTE: *Mister will automatically power OFF after 10 minutes of inactivity.*

2. Press and HOLD green Power/Mist Button for 3 seconds until Mister begins to beep.

   NOTE: *3 second 'Press and HOLD' feature is intended to prevent accidental activation from unauthorized users.*

3. Follow Steps 4 through 6 on page 9.

TO STOP MIST CYCLE

Option 1: Use Remote Control device to stop unit before or during Mist Cycle by pushing the OFF button once on the Remote Control device.

Option 2: Before misting begins push green Power/Mist Button on Mister once to stop Mist Cycle.

NOTE: *If Mister is stopped, it will reset to original settings. The next time Mister is activated it will begin a new 3-minute Mist Cycle with a 12 second delay and audible warning beep.*

Storage & Winterization

During months when outdoor temperatures fall below 40°F, store Mister in a sheltered location away from outdoor elements and in an area with temperatures above freezing (32°F, 0°C). When storing Mister for extended periods of time, store with an empty Tank.

1. To empty Tank, use all misting solution as per recommended operating instructions.
2. Charge battery fully before storing for the winter and/or long periods of non-use.
3. Roll and store Mister in a sheltered location with temperatures above freezing (32°F, 0°C).
4. While in storage, charge Mister battery every two months for optimal battery life.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Mister is not misting after pushing green Power/Mist button	1. Not pressing and holding the green Power/Mist button for 3 seconds	1. Press and Hold Power/Mist button for 3 seconds
	2. Mister Battery is low	2. Remove Battery Pack and charge battery (page 6)
	3. Mister Tank empty	3. Check solution level on front of Tank. Fill Tank if empty.
	4. None of the above	4. Contact Customer Service at 1-888-9NO-BITE
Remote Control device will not operate Mister	1. Mister is not powered ON	1. Press Power/Mist button once to power ON
	2. Not pressing Remote's ON button for at least ONE second	2. Press and hold Remote ON button for one full second
	3. Remote Control batteries are low	3. Replace Remote Control batteries (CR2032 or equivalent)
	4. 'Possible Causes' 2 & 3 in above section	4. Try steps 2 & 3 in above section
	5. Remote Control is not functioning	5. Try activating Mister directly from the unit
	6. None of the above	6. Contact Customer Service at 1-888-9NO-BITE
Mister will not Power ON after pushing green Power/Mist button	1. Mister Battery is low	1. Remove Battery Pack and charge battery (page 6)
	2. Battery Pack is not pushed in far enough	2. Push Battery Pack until it “clicks” into place
	3. None of the above	3. Contact Customer Service at 1-888-9NO-BITE
Mister is not controlling mosquitoes/other biting insects	1. Mister is not positioned properly	1. See page 8 for 'Positioning the Mister'
	2. Tank is empty/solution low	2. Check solution level on front of Tank. Fill if empty.
	3. Mister solution needs to be agitated	3. Gently rock Mister back and forth for 10 seconds
	4. Concentrate and water dilution is incorrect	4. See page 7 for proper filling instructions
	5. None of the above	5. Contact Customer Service at 1-888-9NO-BITE
Only 1 or 2 nozzels are misting	1. Nozzels may be loose	1. Hand-tighten nozzles
	2. Clogged nozzels	2. Contact Customer Service at 1-888-9NO-BITE

Frequently Asked Questions

What is the TERMINIX ALLCLEAR Mosquito Mister 2000?
The TERMINIX ALLCLEAR Mosquito Mister 2000 is the fastest way to clear a yard of mosquitoes and other biting insects. In just 3 minutes ALLCLEAR reduces mosquitoes by more than 90% for as long as six hours.*

How large of an area will the Mister protect?
TERMINIX ALLCLEAR 2000 has been proven to protect up to 2,000 sq. ft. for as long as six hours*. The Mister can be easily repositioned or moved to another area of the yard for additional mosquito control. The number of people in the area and other environmental factors such as wind can affect the level of protection. It may be necessary to mist more often or reposition the Mister according to outdoor conditions.

How does the TERMINIX ALLCLEAR Mister work?
It works by atomizing an ultra-fine mist solution of water and ALLCLEAR Mosquito Mister Concentrate. The mist controls mosquitoes immediately and then creates and invisible barrier of protection that repels biting insects for hours.

What kind of insecticide does the TERMINIX ALLCLEAR Mosquito Mister 2000 use?
There are two concentrates customers can choose from to best meet their insect control needs.

- 100% NATURALS: 100% plant-based formula that protects with the power of the lemongrass plant. It is SAFE to use around kids, pets, food. Environmentally friendly, biodegradable.
- Synergized PLUS: synthetic formula based on botanical extract from the Chrysanthemum flower. EPA registered, low in toxicity, effective for up to 6 hours.

Are the concentrates OK to use in yards with children and animals?
Yes. Our 100% NATURALS formula is safe to use around kids, pets, and food. It contains a botanical extract of the lemongrass plant. Our EPA-registered PLUS formula is a highly effective solution that is considered low toxicity and is intended for use in yards with children and pets.

Can I use my Mister to protect the area around my pool?
Yes. The Mister is very effective at treating areas where you and your family spend time outdoors, including the area around your pool.

What kinds of insects does the Mosquito Mister 2000 eliminate?
The TERMINIX ALLCLEAR Mister and Concentrates kill and repel mosquitoes, gnats, stable flies, horse flies, face flies, and deer flies.

Will it kill insects like bees and butterflies?
It's important to mist when mosquitoes are most active – dusk and dawn – typically the time when beneficial insects are NOT active. The mist has been carefully calibrated to control small biting insects, but can be harmful to larger insects if they come in direct contact with the mist application. Try to mist away from flower gardens and other areas that are known to attract beneficial insects.

Where should I place my TERMINIX ALLCLEAR Mosquito Mister 2000?
Simply place the Mister in the outdoor living area you want to protect and activate. Winds carry the mist throughout the desired coverage area (up to 2,000 sq. ft.), killing mosquitoes on contact and repelling others for up to 6 hours.* The Mister can be easily repositioned or moved to treat other areas of the yard.

* When used with ALLCLEAR PLUS Concentrate. Other insects include: ticks, gnats, horse flies, stable flies, deer flies, face flies and others.

Warranty

UNIVERSAL PEST SOLUTIONS, LP

LIMITED WARRANTY: TERMINIX® ALLCLEAR® Mosquito Mister

What Is Covered:

With respect to the TERMINIX ALLCLEAR Mosquito Mister, this warranty covers any defects in parts, materials, or workmanship, subject to the exclusions set forth below.

How Long Coverage Lasts:

The warranty period is 18 months or 1.5 years from the date of the first consumer purchase of the TERMINIX ALLCLEAR Mosquito Mister.

Condition of Coverage:

This warranty applies only when the TERMINIX ALLCLEAR Mosquito Mister is used for personal, family, or household purposes.

What is not Covered:

This warranty does not cover the following: (a) damage caused by use with unauthorized or non-Universal Pest Solutions parts; (b) damage caused by accident, misuse, abuse, flood, fire, or external causes; (c) damage caused by use in a manner inconsistent with the permitted or intended uses described in the Operator's Manual; (d) damage caused by service performed by anyone other than a representative of Universal Pest Solutions, LP; (e) an TERMINIX ALLCLEAR Mosquito Mister that is modified to significantly alter its functionality or capability, without the prior written consent of Universal Pest Solutions; (f) consumable parts, including batteries used in the remote control but excluding the battery used in the main unit of the TERMINIX ALLCLEAR Mosquito Mister, unless damage to a consumable part occurs due to a defect in TERMINIX ALLCLEAR Mosquito Mister parts, materials, or workmanship; (g) an TERMINIX ALLCLEAR Mosquito Mister that is rented, leased, or used for any other commercial purpose; and (h) an TERMINIX ALLCLEAR Mosquito Mister whose Universal Pest Solutions serial number is removed or defaced.

NO PERSON, AGENT, DEALER, OR DISTRIBUTOR IS AUTHORIZED OR EMPOWERED TO GIVE ANY OTHER WARRANTY OR TO ASSUME ANY OTHER LIABILITY ON BEHALF OF UNIVERSAL PEST SOLUTIONS.

UNIVERSAL PEST SOLUTIONS, LP SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL DAMAGES, THE FOREGOING LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

What Universal Pest Solutions Will Do:

During the warranty period, Universal Pest Solutions, LP will have the option to repair, replace, or refund in full the original purchase price of any TERMINIX ALLCLEAR Mosquito Mister that is defective in parts, materials, or workmanship. When appropriate, repair may include or consist of replacing defective parts.

How to Get Service:

If you believe that your TERMINIX ALLCLEAR Mosquito Mister contains a defect in parts, materials, or workmanship, please do the following:

- Telephone Universal Pest Solutions at 1-888-9NO-BITE (1-888-966-2483). Please state the nature of your problem and have your proof of purchase (e.g., sales receipt) on hand. Also have your Serial Number ready which is located on the bottom of unit Battery Pack.

Universal Pest Solutions, LP is committed to excellent quality and service. If you have any questions or comments about your TERMINIX ALLCLEAR Mosquito Mister, please contact Universal Pest Solutions, LP at the following address:

Universal Pest Solutions, LP
5950 Berkshire Lane, Suite 400
Dallas, Texas 75225

1-888-9NO-BITE (1-888-966-2483)
www.terminixallclear.com

This warranty gives you specific legal rights, and you may have additional legal rights that vary from State to State.

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

FCC ID: W3CACM2000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

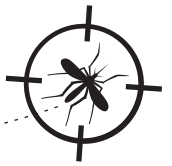

TERMINIX®

CALL TODAY FOR A FREE TERMITE EVALUATION

866-718-5794

UniversalPest SOLUTIONS

1-888-9NO-BITE or **www.terminixallclear.com**

Universal Pest Solutions, LP
5950 Berkshire Lane, Suite 400
Dallas, TX 75225

ACM3100
v3: 11-11